

Look for other award-winning musical toys from Neurosmith!



Musini™ Expansion Packs

Extend the life of your Musini with Musini Expansion Packs! Your Musini is compatible with additional Musini cartridges and accessories for endless hours of fun. Cartridges feature new musical styles, instrument variations, and new ways to play with Musini.

Ages 3 years+



Music Blocks® Maestro

Winner of the prestigious Oppenheim Toy Portfolio Platinum Toy award, Music Blocks Maestro enables children to compose more than one million unique musical compositions simply by mixing and matching five brightly colored blocks! Each colorful block plays a different phrase of music and each side of each block plays a variation of that phrase. Children mix, match, and rearrange the blocks to create their very own musical compositions. Three musical selections in one easy-to-use cartridge offer a wide variety of composing fun!

Ages 2 years+

Warranty

There is a 1-Year Limited Warranty for Neurosmith Smart Toys. Neurosmith, LLC warrants to the original purchaser that this product will be free from defects in material or workmanship for 1 year from the date of purchase. This warranty does not cover damage resulting from accident, misuse, or abuse. VALID ONLY IN THE USA. If you believe that your product may be defective, please attempt to return it at the place of purchase. If you have any trouble, please call us at (800) 220-3669 ext. 1097 or email us at customercare@neurosmith.com.


For more information on this product, to order replacement parts, or to purchase additional Neurosmith toys, please visit www.neurosmith.com or call us at (800) 220-3669.

neurosmith

©Neurosmith, LLC, PO Box 14928, Long Beach, CA 90853 USA
All rights reserved. All trademarks are the property of Neurosmith, LLC.

Musini[™]
Magically transform your
child's energy into music!

Instructions

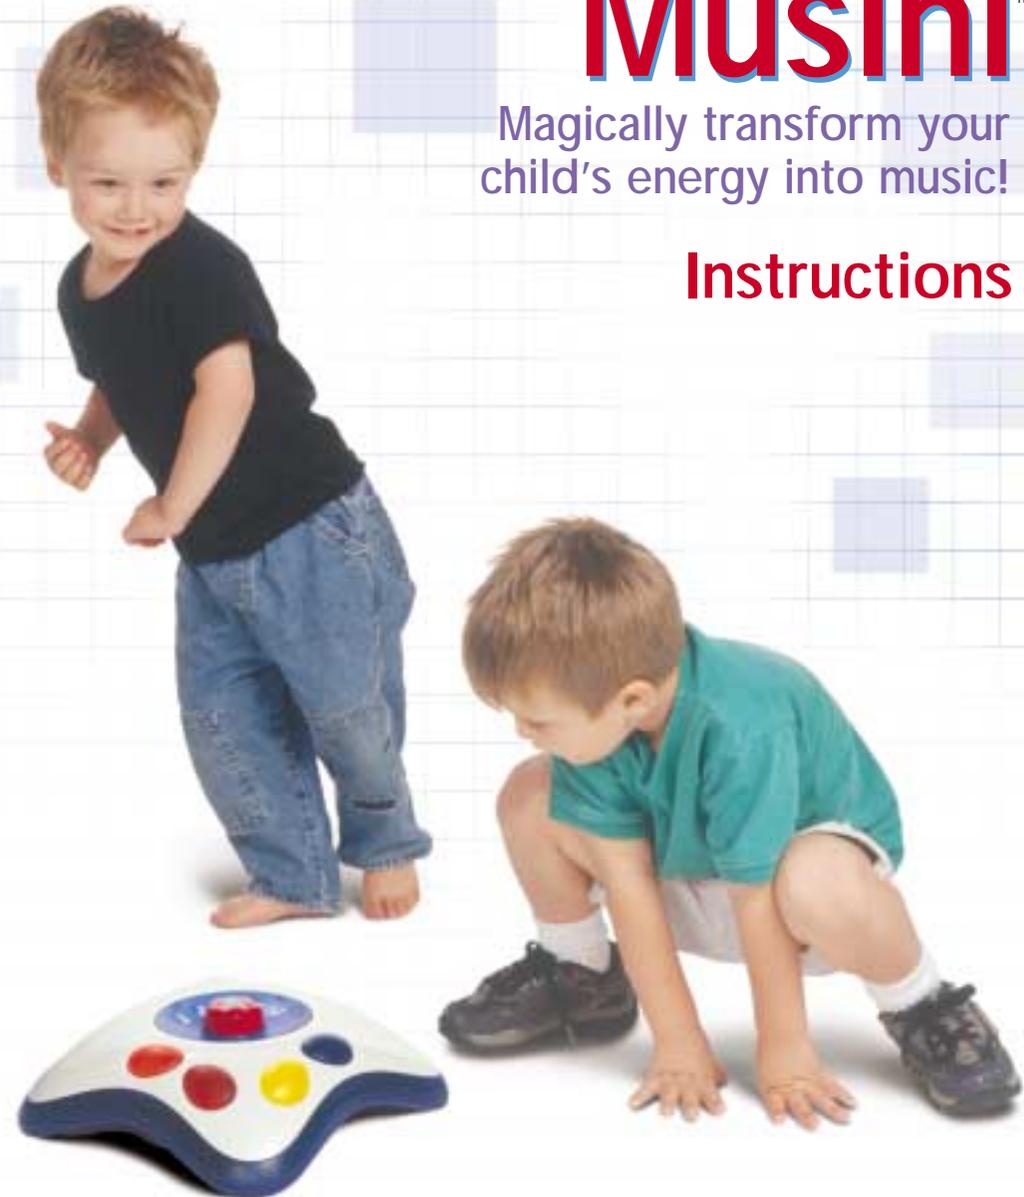

Inserting Batteries

Musini™ requires 4 “C” alkaline batteries. To install the batteries, simply turn the unit over, unscrew the battery door, and insert the batteries. While you have the battery door off, select a volume on the “Low/High” volume switch. Then replace the battery door and screw it into place. To remove the batteries, unscrew the battery door and use your fingers to carefully extract each battery. Never use a metal object to remove the batteries. If your Musini starts making odd sounds, it is probably time to change the batteries.

Activating Musini

Turn your Musini over and slide the “On/Off” switch to the “On” position. Take a few steps or tap the ground near the unit. For each vibration you make, you should hear a musical response and see pulsing lights around the base of the unit. If not, adjust the red sensitivity dial on the side of the unit, turning it higher for thicker carpeting and lower for hard wood or tile flooring. If the glowing blue lights around the base of the unit turn on and stay on, the sensitivity is set too high.

Selecting a Volume

Once you’ve selected the “Low” or “High” volume with the parent controls located in the battery box, your child will be able to manipulate the volume (within your selected range) with the volume dial on the top of the unit.

Getting Started

Select one of five musical styles using the red musical Style Dial on the top of the unit (see opposite page for details on musical styles). Now, start moving! Musini’s MagicSensor will detect every movement you make, sensing the strength and speed of each vibration and responding with a totally personal and unique musical composition. The speed of the music will gradually increase or decrease with the speed of your movements.

There are four colorful buttons on your Musini. These buttons change the dominant instrument in each musical style (see opposite page for details on instruments). Once you’ve selected your musical style, simply press any of these buttons to change the instrument featured in that composition. The button you’ve selected will light up. You can change the instruments featured at any time simply by pressing another button.

More Ways to Play

Your Musini is compatible with additional cartridges and accessories for additional hours of fun. Cartridges and accessories feature new musical styles, instrument variations, and new ways to play with Musini.

Turning Your Musini Off

Musini will automatically turn off after a period of inactivity and will resume again if it detects any vibrations near the unit. If you wish to turn your Musini completely off, simply slide the switch on the bottom of the unit to the “Off” position.

Remember, batteries must always be inserted by an adult and must be inserted with the correct polarity. Use only batteries of the same or equivalent type as recommended in this instructional guide. Do not use rechargeable batteries with this toy. Never mix alkaline, non-alkaline, non-rechargeable, rechargeable (nickel-cadmium), standard (carbon-zinc), old, or new batteries. Non-rechargeable batteries are not to be recharged. Always remove exhausted batteries from the toy. Do not short-circuit the supply terminals. Be sure to keep this instructional guide—it contains important information about battery usage.

Musini™ features five different musical styles for hours of exploration and creativity.

To change styles, simply turn the musical Style Dial on the top of the unit to your selected style. There are also four variations of each style, featuring different instruments. To change instruments, just press one of the brightly colored buttons. Styles and featured instruments are as follows:



Basically Bach

Get ready for your child’s first classical recital, complete with the delicate sounds of woodwinds, harpsichord, rich strings, and majestic brass instruments!



Complete Orchestra



Woodwinds



Pizzicato Strings



Grand Piano



Child’s Play

You’ll love these classic children’s nursery rhymes as much as your child does! Reminisce as your child creates her very own versions of Twinkle, Twinkle, Little Star, London Bridges Falling Down, Row, Row, Row Your Boat, Pop! Goes the Weasel, and Old Mac Donald.



Complete Orchestra



Strings



Music Box, Celeste, Glockenspiel



Grand Piano



Latin Jazz

Your child will sizzle, salsa, and samba with this hot Latin Jazz composition! Every step activates a high-energy blend of Brazilian inspired dance rhythms.



Full band



Rhythms and beats



Marimba



Guitar



Carnival!

Feeling giddy? Every touch, tap, and spin creates a cornucopia of carnival-like circus sounds, complete with silly sound effects! This crazy composition combines the toe-tapping sounds of the big top, the energy of a polka band, and the comedic melodies of vaudeville for a truly kid-perfect music making experience.



Complete Orchestra



Rag Time Band



Synthesizer



Percussive Organ and Choir



Orchestral Overture

Put your child in the conductor’s chair with this traditional Americana piece! This colorful score combines the broad expanses of traditional symphony with soft pastoral passages for a completely creative music making experience.



Complete Orchestra



Woodwinds



Strings



Grand Piano